

LS-725-4170NH1

PARTS LIST

ITEM	PARTS NO	PARTS NAME	Q'TY	USD	ITEM	PARTS NO	PARTS NAME	Q'TY	USD	ITEM	PARTS NO	PARTS NAME	Q'TY	USD
01	712-005	Engine Seat	1		35	712-047	Joint Cylinler Bush	3		69	27-052	O-Ring 20*3	1	
02	959-207	Washer M10x22	4		36	850-041	Valve Seat	3		70	LU-0903024	Screw M10x35L	4	
03	850-108	Screw M6x14L	3		37	850-042A	Stopper	3		71	LU-0904501	Nut 3/8"	1	
04	701-026	Cover, Oil Seal	1		38	22-044A	Valve Spring	3		72	850-103	Screw M8x20L	4	
05	701-026A	O-Ring 99x2	1		39	850-043	Spring Box	3		73	LU-0901702	SCREW	2	
06	701-025	Oil Seal,Crank Shaft	1		40	712-050	Discharge Metal	1		74	523-063F1	Body, Overflow	1	
07	701-024	Bearing	1		41	LU-0908300	Spring Washer M8	10		75	22-4117	Suction Hose Assy	1	
08	712-020	Crank Shaft	1		42	712-050A	Screw M8x120L	6		76	22-4119	Overflow Hose Assy	1	
09	701-021C	Connecting Rod	3		43	22-052	Ring, Air Chamber	1		77	22-090	Packing	1	
10	701-016	Ring, Retaining	1		44	22-053B	Air Chamber	1		78	22-091	Core Coupling	1	
11	22-024B	Bearing	1		45	523-063A	O-Ring 18*2(viton)	2		79	22-092	Wing Nut	2	
12	701-001	Crank Case	1		46	523-063F	Body, Overflow	1		80	22-094	Brass Cup	1	
13	701-010	Oil Plug	1		47	523-060	Valve Seat	1		81	22-095	Core Strainer	1	
14	27-059	O-Ring 20x2	2		48	712-061B	Screw M3x12L	1		82	22-096A	Strainer Assy	1	
15	701-006	Oil Plug	1		49	712-061A	Valve	1		83	850-041B	O-Ring 15x2.5	3	
16	22-005	Ring ,Oil Gauge	1		50	523-062B	Washer Valve Seat	1		84	22-080	Packing	1	
17	22-004	Oil Gauge Plug	1		51	523-062A	Ring 17.4*12*2	1		85	22-081	Core Coupling	1	
18	701-002	Pin M4x15L	2		52	523-064	O-Ring 12*3(viton)	1		86	22-082	Wing Nut	1	
19	712-4123	Plunger	3		53	522-062A	O-Ring 22*2(viton)	1		87	22-084	Brass Cup	1	
20	701-022	Plunger Pin	3		54	523-062	Water Seal Cup	1		88	850-4109	Valve Complete	3	
21	701-030A	Washer	3		55	523-061A	Valve Bar	1		89	LU-0902501	Plug 1/4"PT	1	
22	701-030	Oil Seal, Plunger	3		56	427-068	Pin	1		90	22-051	Ball-Cock	2	
23	701-031	Oil Seal Plung	3		57	LU-0904801	E-shape Ring	2		91	LU-0908400	Spring Washer M10	4	
24	701-033A	Seal Low Pressure	3		58	22-069A	Spring	1		92	104-033A	O-Ring 21*2	1	
25	712-045A	Suction Metal	1		59	22-070	Upper Metal	1		93	523-063F2	Body, Overflow	1	
26	712-047A	O-Ring 21x2.5	12		60	427-065	Spring Box	1		94	928-066D	O-Ring 5.5*2	2	
27	712-048A	Joint Cylinler Bush	3		61	522-066A	LEVER	1						
28	712-036	Washer	3		62	523-064A	SCREW	2						
29	712-037	Bush,Plunger	3		63	850-113	Lock Washer M6	3						
30	712-038	Pistou	3		64	LU-0901701	SCREW	4						
31	712-039	Favose Plate	3		65	22-071	Fly Nut	1						
32	LU-0908200	Spring Washer M6	7		66	22-072	Adjusting Screw	1						
33	LU-0908801	Nut,Check M6	3		67	22-4123B	Fly Nut & Regulating Screw	1						
34	712-046	Cylinder Bush	3		68	523-063E1	Rectifier	1						

LS-725-4170NH1



